


ASSEMBLY INSTRUCTION

710815

Full vanity panel

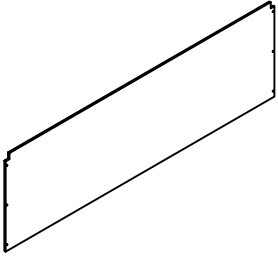

1

#20369: Screw 3 x 15mm



6 x #20369

