
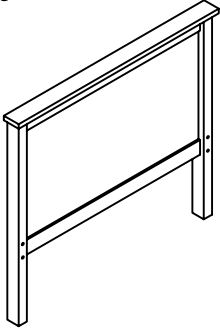
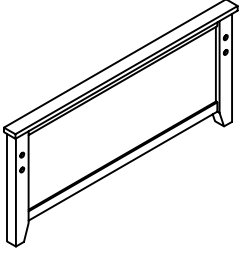
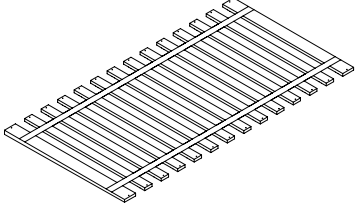



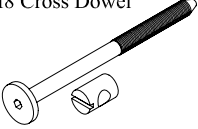


ASSEMBLY INSTRUCTION

710130 AND 710704

710130 TWIN HEADBOARD AND FOOTBOARD WITH TWIN SLATS

| | | | | | |
|---|----------------------------------|--|----------------------------------|--|--------------------|
| <p>Twin high bed end</p>  | <p>1</p> | <p>Twin footboard</p>  | <p>1</p> | <p>Slats</p>  | <p>14 x slats</p> |
| <p>#20042: Drill Bit #20018: Hex Wrench 5mm</p>  | <p>1 x #20042 1 x #20018</p> | <p>#20015: M8 110mm hex head bolt #20358: M8 Cross Dowel</p>  | <p>8 x #20015 8 x #20358</p> | <p>#20022: Wood Slat Screw</p>  | <p>28 x #20022</p> |
| <p>#22139</p>  | <p>8 x #22139</p> | | | | |

710704 BED SIDE RAILS
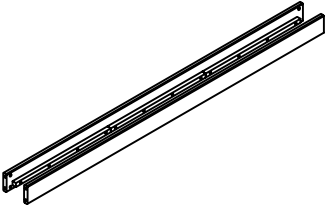
| | | | | | |
|---|----------------|--|--|--|--|
| <p>Bed side rail</p>  | <p>1 x set</p> | | | | |
|---|----------------|--|--|--|--|

